


**Thank you for purchasing a Mustard Bikes Fender Eliminator.  
The following is a brief guide for installation of your  
KTM RC125-200-390 Fender Eliminator.**

1. Remove rider seat with key and pillion seat from bike (1x 5mm allen bolt at front of pillion seat).
2. Locate plugs for rear fender and unplug (Grey, Green and Red plug)
3. Remove 4 x nuts (10mm hex socket) while holding the stock fender. Be careful not to drop the nuts down the intake. Gently remove stock fender from bike.
4. Remove 2 x phillips head screw from underneath stock fender and separate the frame from plastic guard.
5. Remove indicators (14mm spanner) and fit to fender eliminator.
6. Fit OEM number plate light plug to the LED bolt. The LED bolt is polarity sensitive.
7. Assemble fender eliminator with 2x 12mm supplied bolts and nyloc nuts as shown on reverse page. Do not fully tighten bolts.
8. Bolt fender eliminator to bike using 4x 16mm supplied bolts and original nuts. Check for alignment and tighten all bolts.
9. Feed wires back in a suitable position and cable tie to the frame of the fender eliminator. Take care not to bend the indicator resistors. Plug in all cables and check for proper operation before re-fitting rider seats.

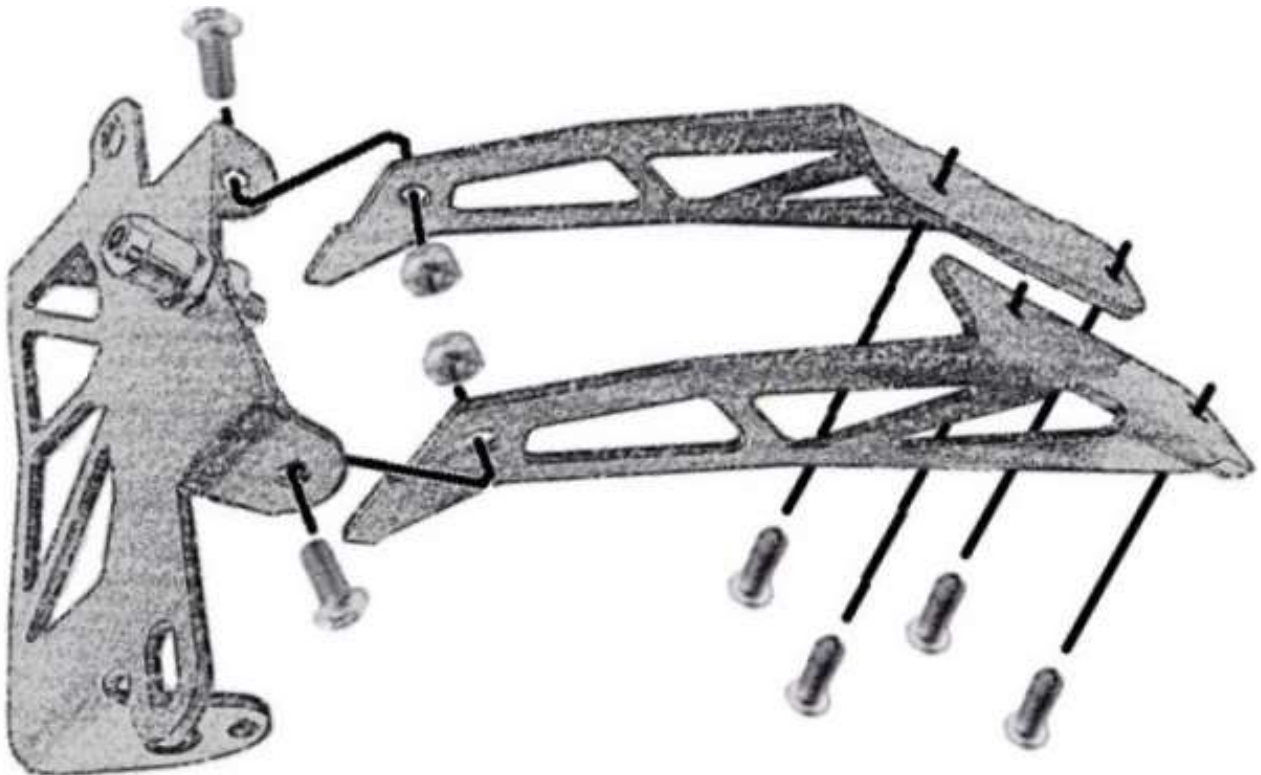

If you have any problems with installation feel free to contact us at [help@mustardbikes.com](mailto:help@mustardbikes.com) for any queries.  
We will be more than happy to help in any way we can.

